

9950 Program Neutral K8A Motherboard RS232 Instruction List

Default baud rate: 115200 Version: 3.0.0 Time: 03/12/2021

INSTRUCTION	INDEX	ASCII CODE	REMARKS
6B303173413030300D	HDTV Power - STBY	k01sA000<CR>	
6B303173413030310D	HDTV Power - ON	k01sA001<CR>	
6B303173423030340D	Input HDMI	k01sB004<CR>	
6B303173423031340D	Input - HDMI1	k01sB014<CR>	
6B303173423032340D	Input - HDMI2	k01sB024<CR>	
6B303173423030360D	Input - VGA	k01sB006<CR>	
6B303173423030370D	Input - OPS1	k01sB007<CR>	
6B303173423030380D	Input - USB	k01sB008<CR>	
6B303173423030390D	Input - DP	k01sB009<CR>	
6B303173423030410D	Input - Android	k01sB00A<CR>	
6B303173433x3x3x0D	Contrast	k01sCxxx<CR>	
6B303173443x3x3x0D	Brightness	k01sDxxx<CR>	
6B303173453x3x3x0D	Sharpness	k01sExxx<CR>	
6B303173463x3x3x0D	Saturation	k01sFxxx<CR>	
6B303173473x3x3x0D	Hue	k01sGxxx<CR>	
6B303173483030300D	Color Mode - NORMAL	k01sH000<CR>	
6B303173483030310D	Color Mode - WARM	k01sH001<CR>	
6B303173483030320D	Color Mode - COLD	k01sH002<CR>	
6B303173483030330D	Color Mode - USER	k01sH003<CR>	
6B3031734A3x3x3x0D	Bass	k01sJxxx<CR>	
6B3031734B3x3x3x0D	Treble	k01sKxxx<CR>	
6B3031734C3x3x3x0D	Balance	k01sLxxx<CR>	
6B3031734E3030300D	OSD Language - English	k01sN000<CR>	
6B3031734E3030310D	OSD Language - French	k01sN001<CR>	
6B3031734E3030320D	OSD Language - Spanish	k01sN002<CR>	
6B3031734E3030330D	OSD Language - Traditional Chinese	k01sN003<CR>	
6B3031734E3030340D	OSD Language - Simple Chinese	k01sN004<CR>	
6B3031734F3030300D	Power Lock - Unlock	k01sO000<CR>	
6B3031734F3030310D	Power Lock - Lock	k01sO001<CR>	

1-833-TOUCHVW (868-2489)

TouchView Interactive, 830 W Chestnut St., Brockton, MA 02301



9950 Program Neutral K8A Motherboard RS232 Instruction List

Default baud rate: 115200 Version: 3.0.0 Time: 03/12/2021

INSTRUCTION	INDEX	ASCII CODE	REMARKS
6B303173503x3x3x0D	Volume	k01sPxxx<CR>	
6B303173503230300D	Volume - Down	k01sP200<CR>	
6B303173503230310D	Volume - Up	k01sP201<CR>	
6B303173513030300D	Mute - OFF	k01sQ000<CR>	
6B303173513030310D	Mute - ON	k01sQ001<CR>	
6B303173523030300D	Button Lock - Unlock	k01sR000<CR>	
6B303173523030310D	Button Lock - Lock	k01sR001<CR>	
6B303173533030300D	Menu Lock - Unlock	k01sS000<CR>	
6B303173533030310D	Menu Lock - Lock	k01sS001<CR>	
6B303173543x3x3x0D	Number	k01sTxxx<CR>	
6B303173553030300D	Key Pad - UP	k01sU000<CR>	
6B303173553030310D	Key Pad - DOWN	k01sU001<CR>	
6B303173553030320D	Key Pad - LEFT	k01sU002<CR>	
6B303173553030330D	Key Pad - RIGHT	k01sU003<CR>	
6B303173553030340D	Key Pad - ENTER	k01sU004<CR>	
6B303173553030350D	Key Pad - INPUT	k01sU005<CR>	
6B303173553030360D	Key Pad - MENU	k01sU006<CR>	
6B303173553030370D	Key Pad - EXIT	k01sU007<CR>	
6B303173563030300D	Remote Control - DISABLE	k01sV000<CR>	
6B303173563030310D	Remote Control - ENABLE	k01sV001<CR>	
6B3031735859xxxx0D	Date - Year	k01sXYxx<CR>	
6B303173584Dxxxx0D	Date - Month	k01sXMxx<CR>	
6B3031735844xxxx0D	Date - Day	k01sXDxx<CR>	
6B3031735948xxxx0D	Date - Hour	k01sYHxx<CR>	
6B303173594Dxxxx0D	Date - Min	k01sYMxx<CR>	
6B3031735953xxxx0D	Date - Sec	k01sYSxx<CR>	

1-833-TOUCHVW (868-2489)

TouchView Interactive, 830 W Chestnut St., Brockton, MA 02301



9950 Program Neutral K8A Motherboard RS232 Instruction List

Default baud rate: 115200 Version: 3.0.0 Time: 03/12/2021

INSTRUCTION	INDEX	ASCII CODE	REMARKS
6B3031735A3030300D	Restore Default	k01sZ000<CR>	
6B303167613030300D	Get Constrast	k01ga000<CR>	
6B303167623030300D	Get Brightness	k01gb000<CR>	
6B303167633030300D	Get Sharpness	k01gc000<CR>	
6B303167643030300D	Get Saturation	k01gd000<CR>	
6B303167653030300D	Get Hue	k01ge000<CR>	
6B303167663030300D	Get Volume	k01gf000<CR>	
6B303167673030300D	Get Mute	k01gg000<CR>	
6B303167683030300D	Get Input Source	k01gh000<CR>	
6B303167693030300D	Get Power Status	k01gi000<CR>	
6B3031676A3030300D	Get Remote Control	k01gj000<CR>	
6B3031676B3030300D	Get Power Lock	k01gk000<CR>	
6B3031676C3030300D	Get Button Lock	k01gl000<CR>	IR Key Pad
6B3031676D3030300D	Get Menu Lock	k01gm000<CR>	Menu - Android
6B3031676E3030300D	Get Temperature	k01gn000<CR>	
6B3031676F3030300D	Get Operation Time	k01go000<CR>	Get Boot Time Amount - Runtime
6B303167704D30300D	Get Date - Month	k01gpM00<CR>	
6B303167704430300D	Get Date - Day	k01gpD00<CR>	
6B303167714830300D	Get Date - Hour	k01gqH00<CR>	
6B303167714D30300D	Get Date - Min	k01gqM00<CR>	
6B303167715330300D	Get Date - Sec	k01gqS00<CR>	
6B303167723030300D	Get Device Name	k01gr000<CR>	
6B303167733030300D	Get MAC Address	k01gs000<CR>	

1-833-TOUCHVW (868-2489)

TouchView Interactive, 830 W Chestnut St., Brockton, MA 02301



9950 Program Neutral K8A Motherboard RS232 Instruction List

Return Value Format

Return Constrast = 6B303172613x3x3x0D	Return_Constrast=k01raxxx<CR>
Return Brightness = 6B303172623x3x3x0D	Return_Brightness=k01rbxxx<CR>
Return Sharpness = 6B303172633x3x3x0D	Return_Sharpness=k01rcxxx<CR>
Return Saturation = 6B303172643x3x3x0D	Return_Saturation=k01rdxxx<CR>
Return Hue = 6B303172653x3x3x0D	Return_Hue=k01rexxx<CR>
Return Volume = 6B303172663x3x3x0D	Return_Volume=k01rfxxx<CR>
Return Mute On = 6B303172673030310D	Return_Mute_On=k01rg001<CR>
Return Mute Off = 6B303172673030300D	Return_Mute_Off=k01rg000<CR>
Return Input Source = 6B 30 31 72 68 3x 3x 3x 0D	Return_Input_Source=k01rhxxx<CR>

Return Input HDMI No Signal = 6B303172683030340D	Return_Input_HDMI_NoSignal=k01rh004<CR>
Return Input HDMI1 No Signal = 6B303172683031340D	Return_Input_HDMI1_NoSignal=k01rh014<CR>
Return Input HDMI2 No Signal = 6B303172683032340D	Return_Input_HDMI2_NoSignal=k01rh024<CR>
Return Input VGA No Signal = 6B303172683030360D	Return_Input_VGA_NoSignal=k01rh006<CR>
Return Input OPS1 No Signal = 6B303172683030370D	Return_Input_OPS1_NoSignal=k01rh007<CR>
Return Input USB No Signal = 6B303172683030380D	Return_Input_USB_NoSignal=k01rh008<CR>
Return Input DP No Signal = 6B303172683030390D	Return_Input_DP_NoSignal=k01rh009<CR>
Return Input Android No Signal = 6B303172683030410D	Return_Input_Android_NoSignal=k01rh00A<CR>
Return Input HDMI Signal = 6B303172683130340D	Return_Input_HDMI_Signal=k01rh104<CR>
Return Input HDMI1 Signal = 6B303172683131340D	Return_Input_HDMI1_Signal=k01rh114<CR>
Return Input HDMI2 Signal = 6B303172683132340D	Return_Input_HDMI2_Signal=k01rh124<CR>
Return Input VGA Signal = 6B303172683130360D	Return_Input_VGA_Signal=k01rh106<CR>
Return Input OPS1 Signal = 6B303172683130370D	Return_Input_OPS1_Signal=k01rh107<CR>
Return Input USB Signal = 6B303172683130380D	Return_Input_USB_Signal=k01rh108<CR>
Return Input DP Signal = 6B303172683130390D	Return_Input_DP_Signal=k01rh109<C R>
Return Input Android Signal = 6B303172683130410D	Return_Input_Android_Signal=k01rh10A<CR>

9950 Program Neutral K8A Motherboard RS232 Instruction List

Return Value Format

Return Power Status = 6B303172693030310D	Return_Power_Status=k01ri001<CR> Here is the String - Now On
Return Remote Control On = 6B3031726A3030310D	Return_Remote_Control_On=k01rj001<CR>
Return Remote Control Off = 6B3031726A3030300D	Return_Remote_Control_Off=k01rj000<CR>
Return Power Lock = 6B3031726B3030310D	Return_Power_Lock=k01rk001<CR>
Return Power Unlock = 6B3031726B3030300D	Return_Power_Unlock=k01rk000<CR>
Return Button Lock = 6B3031726C3030310D	Return_Button_Lock=k01rl001<CR>
Return Button Unlock = 6B3031726C3030300D	Return_Button_Unlock=k01rl000<CR>
Return Menu Lock = 6B3031726D3030310D	Return_Menu_Lock=k01rm001<CR>
Return Menu Unlock = 6B3031726D3030300D	Return_Menu_Unlock=k01rm000<CR>
Return Temperature = 6B3031726E3x3x3x0D	Return_Temperature=k01rnxxx<CR>
Return Operation Time = 6B30316F3x3x3x3x0D	Return_Operation_Time=k01oxxxx<CR>
Return Date Month = 6B303172704Dxxxx0D	Return_Date_Month=k01rpMxx<CR>
Return Date Day = 6B3031727044xxxx0D	Return_Date_Day=k01rpDxx<CR>
Return Date Hour = 6B3031727148xxxx0D	Return_Date_Hour=k01rqHxx<CR>
Return Date Min = 6B303172714Dxxxx0D	Return_Date_Min=k01rqMxx<CR>
Return Date Sec = 6B3031727153xxxx0D	Return_Date_Sec=k01rqSxx<CR>
Return Device Name = 6B3031723xxxxxxx0D	Return_Device_Name=k01rxxxx<CR>
Return MAC Address = 6B303172733xxxxx0D	Return_MAC_Addr=k01rsxxx<CR>

1-833-TOUCHVW (868-2489)

TouchView Interactive, 830 W Chestnut St., Brockton, MA 02301

